

Copyright Notice

This manual and all content within are copyright protected and owned by FL Technology Pty Ltd. No part of this document may be reproduced, distributed, or transmitted in any form or by any means, including photocopying, recording, or other electronic or mechanical methods, without prior written permission from the publisher. Unauthorized use, reproduction, or distribution of this material is prohibited and may result in legal action. If you have any questions about this notice or suspect that this material has been used in breach of copyright restrictions, please contact us at legal@fancyleds.com.

 SYNCED SMART LIGHTING

User Manual

Synced Fancyleds

MODEL NUMBER: SF2.0

Included Items & Install

NO	ITEMS	QUANTITY
1	Synced Fancyleds	x1
2	Control Box	x1
3	USB-C Cable	x1
4	Power Adaptor	x1
5	Instruction Manual	x1

1 Useful Information

We recommend having a second person assist you. One person should hold the Synced Fancyleds while the other removes the protective plastic film from the adhesive. The Synced Fancyleds has three layers: the LED strip, the adhesive, and the plastic film. Any weight pulling on the Synced Fancyleds, such as the power adaptor, will render the adhesive ineffective.

2 Orientation

It may be helpful to refer to Step (8) to see the orientations that might be suitable for your setup. Deciding the position of the Synced Fancyleds relative to your TV is important for the following steps.

3 Preparing the Installation Area and Placing


Ensure the LED strip is placed on a smooth, flat surface. It's recommended to clean the area first to remove any dust. For better diffusion, consider placing the LEDs behind an object, such as underneath an entertainment unit, so they reflect off the wall.

Peel the plastic film off the LED strip and press it firmly onto the chosen surface in the desired area. Make sure the LED strip is fully adhered and not hanging, with all adhesive making contact with the surface. Avoid letting the adhesive touch your fingers or the floor.

Setup

4 Cutting the Synced Fancyleds (Optional)

Using scissors, cut the excess Synced Fancyleds precisely along the orange lines to avoid damage, ensuring it fits perfectly in your desired position.

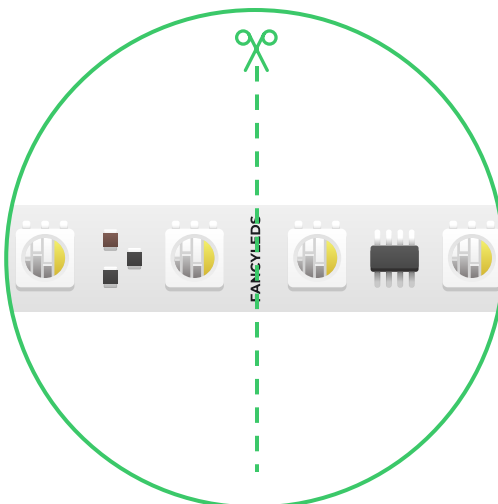

5 Connecting the Synced Fancyleds

- Plug the power cable into the Synced Fancyleds control box.
- Connect the Synced Fancyleds USB-C cable to the control box.
- Plug the power adaptor into a wall outlet.

6 Download & Install the Fancyleds App

Available on the App Store and Google Play, or scan the barcode below.



7 Connecting via the App

- Open the Fancyleds app.
- Ensure your phone is connected to a 2.4 GHz WiFi network and Bluetooth is enabled.
- Press the blue "+" icon at the top right corner and select 'Add Device'. The Synced Fancyleds will appear automatically.

Orientation

8 Deciding on the Position

Choose the best position for your Synced Fancyleds relative to your TV based on the options in the settings of the Synced Fancyleds. Common positions include above or below the TV. Example (1) below demonstrates the Synced Fancyleds placed above the TV, with the control box to the left and the LED strip directed to the right.



Frequently Asked Questions

My phone will not connect to the app?

Confirm the WiFi connection by ensuring your phone is connected to a 2.4 GHz WiFi network. If you are unsure, confirm this with your modem manufacturer. Check the app permissions by going to the settings on your phone and enabling location, WiFi, and Bluetooth for the Synced Fancyleds app. Remove the device by opening the app and removing the Synced Fancyleds icon. Reset the power by unplugging the power cable from the control box, waiting for 5 seconds, reinserting the power cable, and holding the white button on the Synced Fancyleds control box for 10 seconds to reset. If the connection issue persists, reattempt the above steps using a different mobile device.

My TV and Synced Fancyleds are not syncing?

Check the Fancy Sync Box by ensuring it is syncing with your TV and HDMI device first. This step is essential for proper syncing. If the issue persists, reset the Fancy Sync Box by disconnecting and reconnecting the power.

The orientation is inverted?

Adjust the orientation by trying the inverted side in the orientation settings. Adjust the left and right orientation settings on the Fancy Sync Box if necessary. Match the diagram positioning by ensuring the Synced Fancyleds matches the positioning shown in the settings diagram. For example, if it is positioned above the TV, it should start from the left, on the control box side, and finish on the right, where the LED strip ends or where you cut it. It must match the diagram and be vertically centered with the TV.

WARNING: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This device and its antenna(s) must not be co-located or operated in conjunction with any other antenna or transmitter.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator your body.



● SCAN FOR SUPPORT



FAQ / Support / More

fancyleds.com